


Epson Stylus® NX530

Start Here


Read these instructions before using your product.

1 Unpack

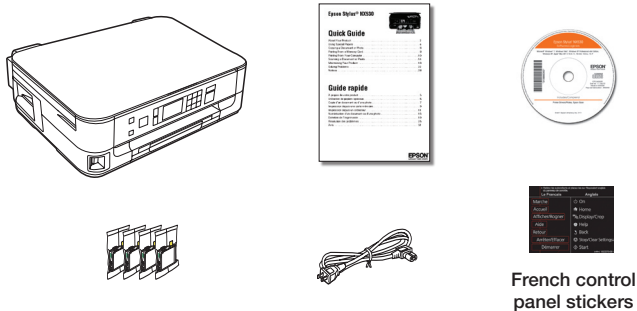


Caution: Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Remove all protective materials.

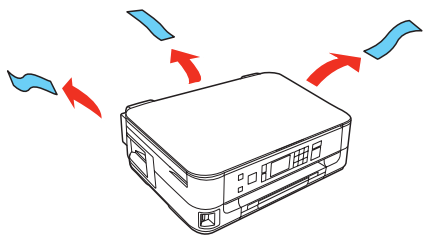


2 Turn on and adjust

- 1 Connect the power cord to the back of the printer and to an electrical outlet.

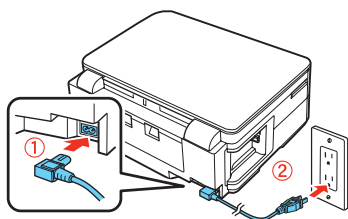

Caution: Do not connect to your computer yet.

- 2 Press the **On** button, then raise the control panel.

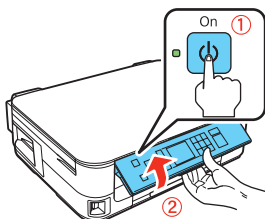

Note: If you want to lower the control panel, squeeze the release bar underneath and push the control panel down.

Caution: To avoid damaging your product, always squeeze the release bar to lower the control panel.




412184600

EPSON®
EXCEED YOUR VISION


3 Select language

Press **▲** or **▼** to select your language, then press **OK**.

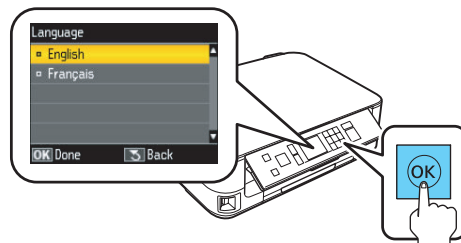


4 Install ink cartridges


- 1 Lift up the scanner unit.

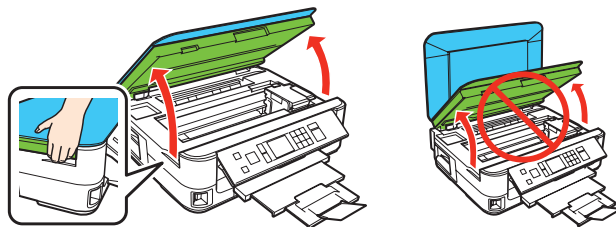


- 2 Open the cartridge cover.

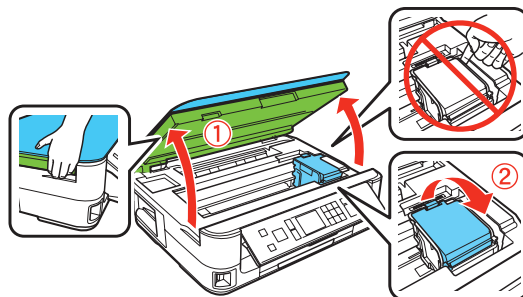

- 3 Shake the ink cartridges gently 4 or 5 times, then unpack them.

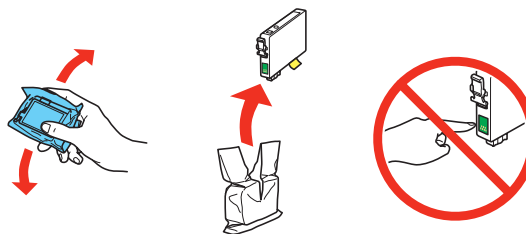


- 4 Remove only the yellow tape from each cartridge.

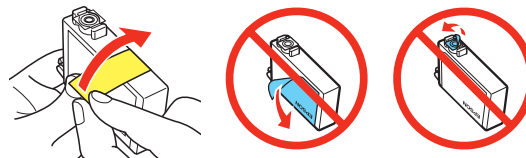


Caution: Don't remove any other seals or the cartridges may leak.


- 5 Insert the cartridges in the holder for each color.

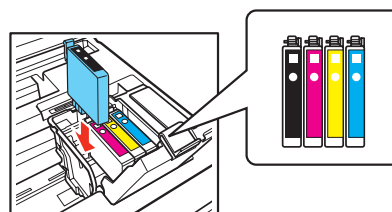

- 6 Press each cartridge down until it clicks.

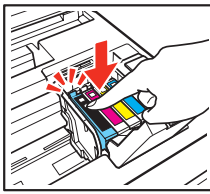

- 7 Close the cartridge cover. Press down until it clicks. Then lower the scanner unit and press **OK**.

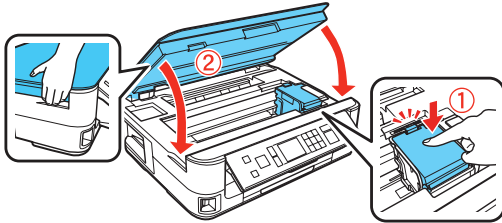


- 8 Wait while the ink delivery system primes. Priming takes about 5 minutes.

Note: Your printer ships with full cartridges and part of the ink from the first cartridges is used for priming the printer.


Caution: Don't turn off the printer while it is priming or you'll waste ink.

- 9 When you see this menu on your product's LCD screen, do not make a selection yet. Continue with the instructions in the following sections to load paper in your product and install software.

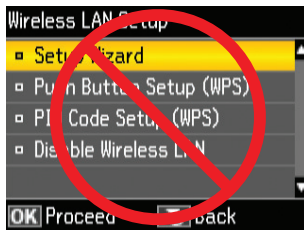


5 Load paper


- 1 Pull out the paper cassette at the bottom of the printer.

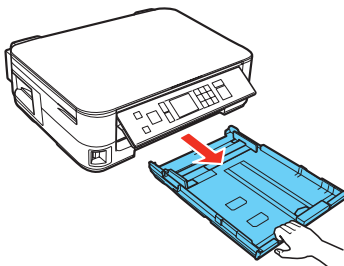

- 2 Slide the edge guides to the sides of the cassette.

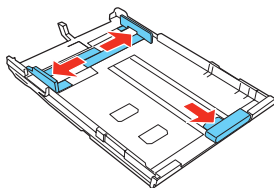


- 3 Slide the edge guide to your paper size.

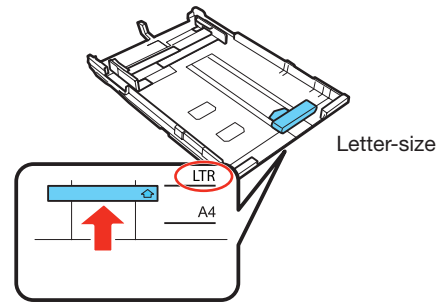


- 4 Load paper against the edge guide with the glossy or printable side facedown.


Note: Make sure the paper is loaded against the edge guide and not sticking out from the end of the cassette.

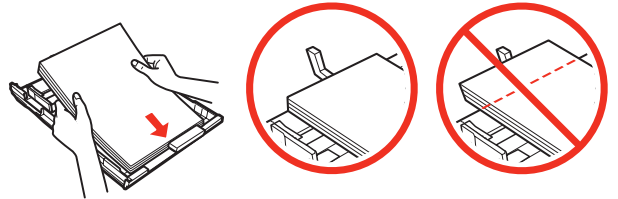

- 5 Slide the edge guides against the edges of the paper, but not too tightly.

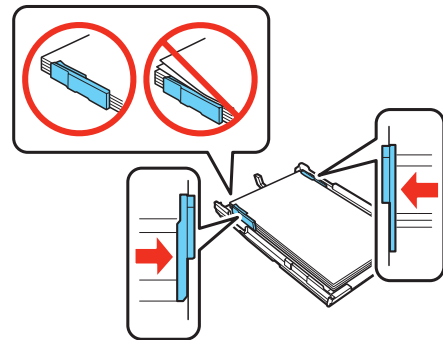


- 6 Keep the cassette flat as you insert it.

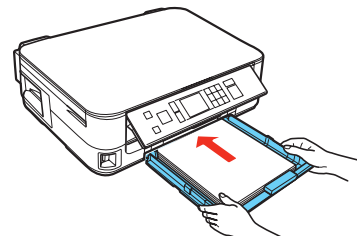

Note: The paper may slide forward slightly as you insert the cassette. This is normal.

- 7 Extend the output tray and flip up the paper stopper.

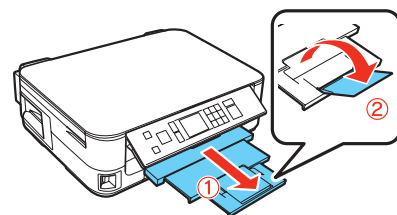


Note: Do not flip up the paper stopper if you're using legal-size paper.

6 Install software


Note: If your computer does not have a CD/DVD drive, you can download the software from the Epson website (see “Epson technical support”).

Caution: Be sure to close your other programs, including any screen savers and virus protection software, before beginning this software installation.

- 1 Make sure the printer is **NOT CONNECTED** to your computer.

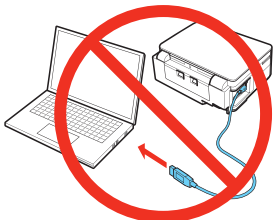

Windows®: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable. You can't install your software that way.

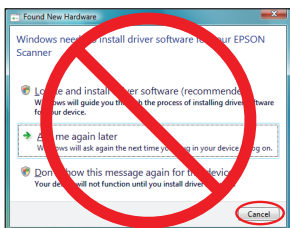


- 2 Insert the product CD.

- 3 **Windows:** If you see the AutoPlay window, click **Run Setup.exe**. If you see the User Account Control screen, click **Yes** or **Continue**.



Mac OS® X: Double-click the  **Epson** icon.

- 4 Click **Install** (Windows) or **Continue** (Mac OS X) and follow the instructions on your computer screen.

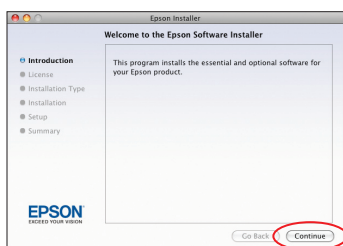

- 5 When you see the Select Your Connection screen, check the “Connection options” section on this sheet for more information.

Choose your connection. Then click **Next** (Windows) or **Continue** (Mac OS X) and follow the instructions on your computer screen.

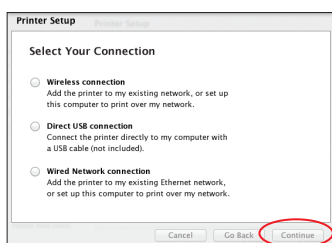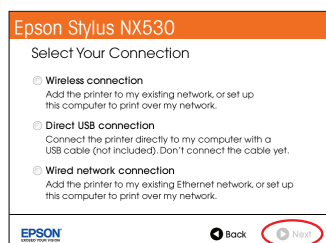

Connection options

Wireless connection

You must install the software on every computer from which you want to print. For the first installation, we recommend using a USB cable (not included) to simplify wireless setup. After the printer is connected to the network, you will be prompted to remove the cable.

If you're using Mac OS X 10.6 or 10.7, or you don't have a USB cable, you will need to use the control panel on the printer to select wireless settings. Follow the installation on your computer screen during software instruction; they will explain how to connect the printer wirelessly this way.

Make sure you know your network name (SSID) and network password:

- Network name _____
- Network password _____

If you don't have this information, contact the person who set up your network.

Direct USB connection

Make sure you have a USB cable (not included).

Wired network connection

Make sure you have an Ethernet® network cable (not included). You must install the software on every computer from which you want to print.

Any problems?

If you experience problems during setup, see below:

Network setup was unsuccessful.

- Make sure you select the right network name (SSID).
- If you see a firewall alert message, click **Unblock** or **Allow** to let setup continue.
- If your network has security enabled, make sure you enter your network password (WEP key or WPA passphrase) correctly. If it has uppercase (**ABC**) or lowercase (**abc**) letters, make sure you enter them correctly.



Function buttons

Press ▲, ▼, ►, or ◀ on the printer to highlight a letter or function button on the screen. Press **OK** to select it.

Use the function buttons to select uppercase (**AB12**), lowercase (**ab12**), symbols (!#%@), spaces (), or to delete characters (◀).


When you're finished, highlight **Done** and press **OK**.

You see error messages on the printer's LCD screen.

See your *Quick Guide* for troubleshooting information.

Setup is unable to find my printer after connecting it with a USB cable.


Make sure it is securely connected as shown:

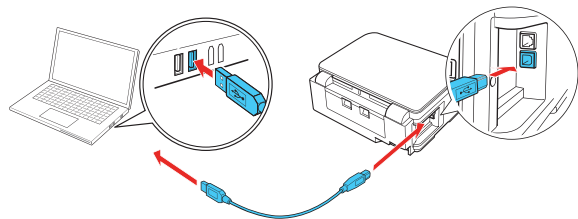

Any questions?

Quick Guide

Basic instructions for copying, printing, and scanning.

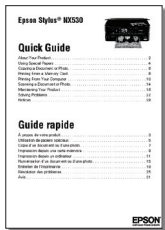

User's Guide

Click the icon on your desktop (or in the **Applications/Epson Software/Guide** folder on Mac OS X) to access the online *User's Guide*, software downloads, Epson Supplies Central®, and more (requires an Internet connection). If you don't have a User's Guide icon, you can install it from the CD or go to the Epson website, as described below.



On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson technical support

Visit epson.com/support (U.S.) or epson.ca/support (Canada) where you can download drivers, view manuals, get FAQs, or e-mail Epson.

To speak with a support specialist, call:

U.S.: (562) 276-4382, 6 AM to 8 PM, Pacific Time, Monday through Friday, and 7 AM to 4 PM, Pacific Time, Saturday.

Canada: (905) 709-3839, 6 AM to 8 PM, Pacific Time, Monday through Friday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Recycling

Epson offers a recycling program for end of life hardware and ink cartridges. Please go to www.epson.com/recycle for information on how to return your products for proper disposal.

Need paper and ink?

Try Epson paper with DURABrite® Ultra Ink for professional results. For the right supplies at the right time, you can purchase them at Epson Supplies Central at www.epson.com/ink3 (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

DESIGNED *for* EXCELLENCE™

Epson printers, ink and specialty papers.

Genuine Epson paper

Epson offers a wide variety of papers to meet your needs; visit Epson Supplies Central for more information.



Premium Presentation Paper Matte

Heavy weight, non-glare card stock for school and business projects plus photos.

Genuine Epson inks



Look for the numbers below to find your cartridges. It's as easy as remembering your number!



Epson Stylus NX530 ink cartridges

Color	Standard-capacity	Extra High-capacity
Black	125	127
Cyan	125	127
Magenta	125	127
Yellow	125	127

Epson Connect



Get instant, wireless printing of photos and attachments right from smartphones, iPads, tablets, and other popular mobile devices. See www.epson.com/connect for details.

Epson, Epson Stylus, DURABrite, and Supplies Central are registered trademarks and Epson Exceed Your Vision is a registered logomark of Seiko Epson Corporation. Designed for Excellence is a trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2011 Epson America, Inc. 8/11

CPD-34363R1

Printed in XXXXXX